

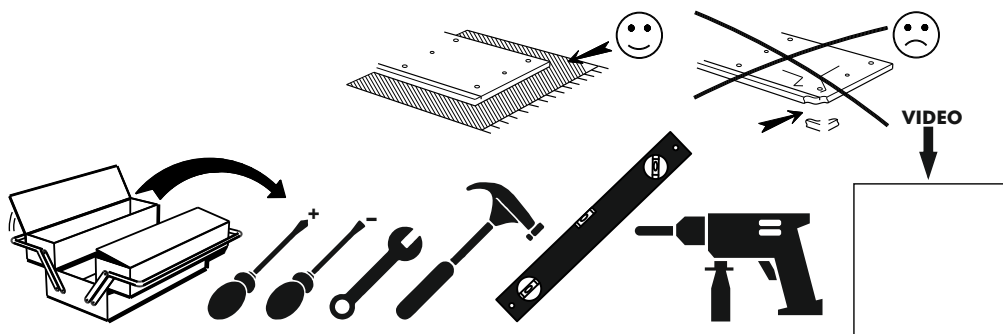


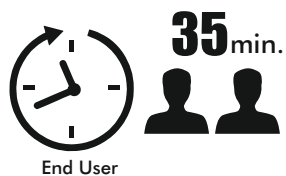

MULTIMO





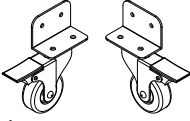
730-3 TRUNDLE

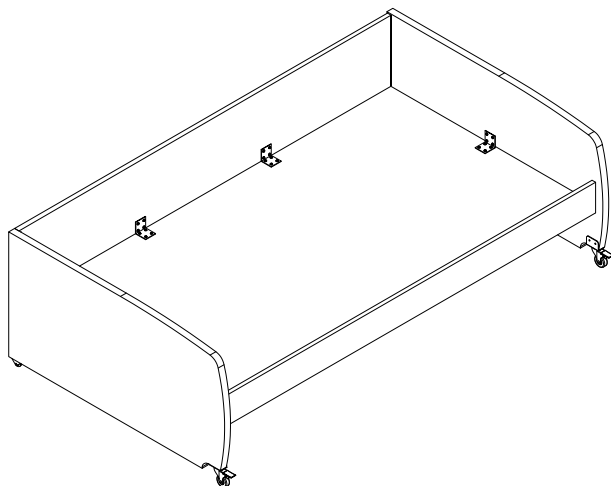


Assembly Instructions

Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A		1,18	78,74	15,75	1	30	2000	400
B		0,71	38,90	21,65	2	18	988	550
C		0,71	78,74	5,91	1	18	2000	150
D		0,71	79,45	36,89	1	18	2018	937

Accessories List


MXN 02  8 / piece TKR - 02 (30 mm)	MNG - 01  8 / piece KB - 01	KVL 01  6 / piece TAP - 01	VTB - 01 (4,8x16) mm  52 / piece VD - 05 (4x25) mm
TKR-F - 01  2 / piece			

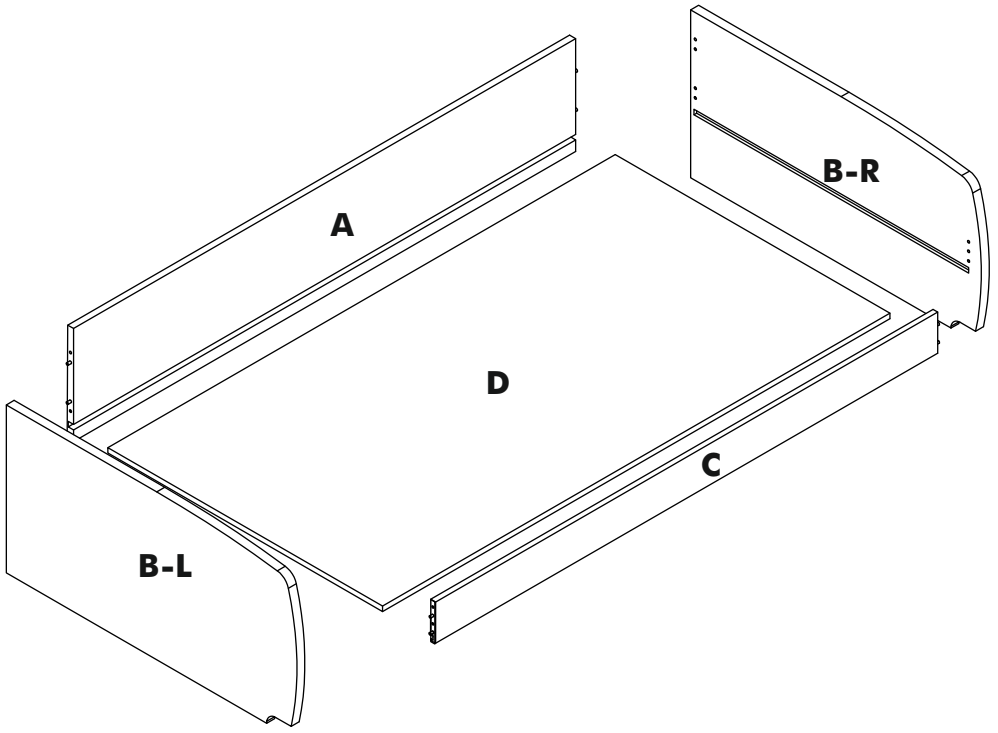


STEP 1




MNX - 02




KVL - 01

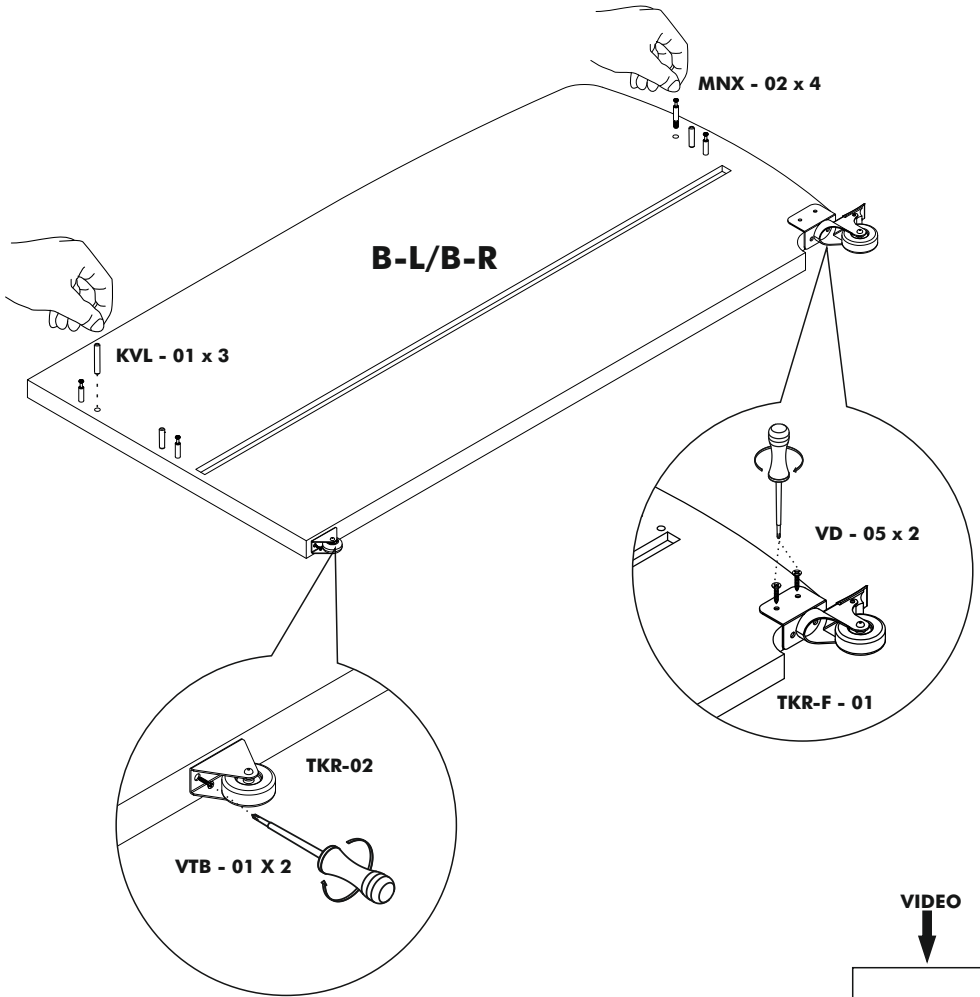


STEP 2

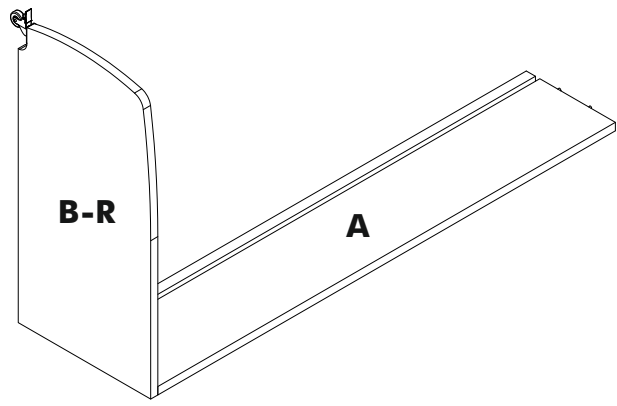

STEP 3

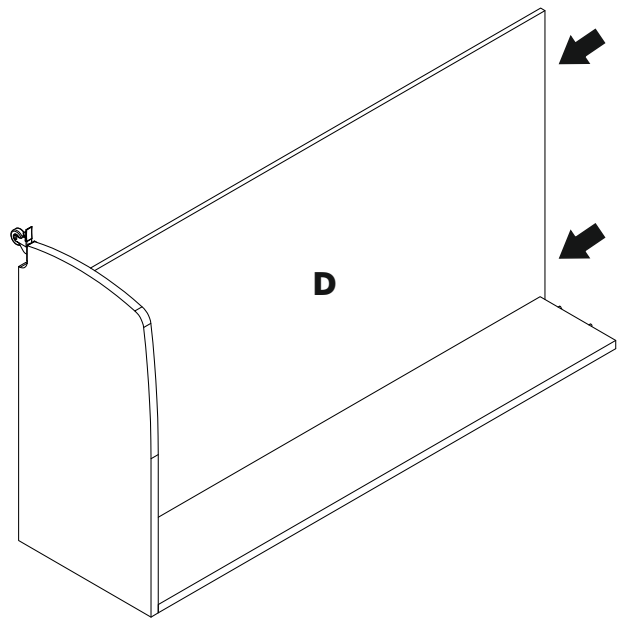

VIDEO

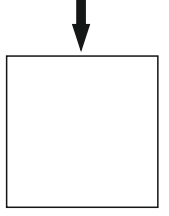


link

STEP 4




MNG - 01

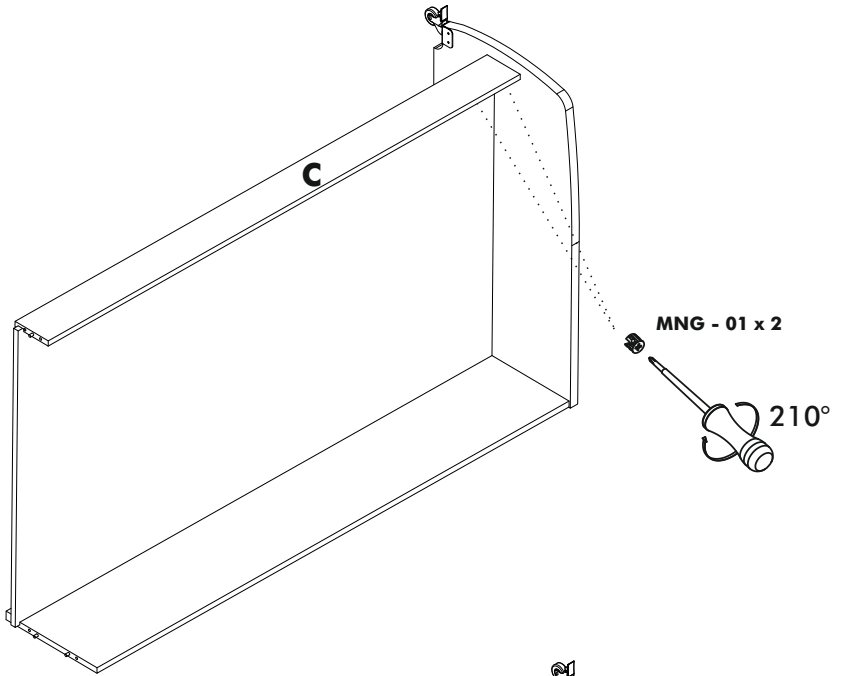

STEP 5





MNG - 01

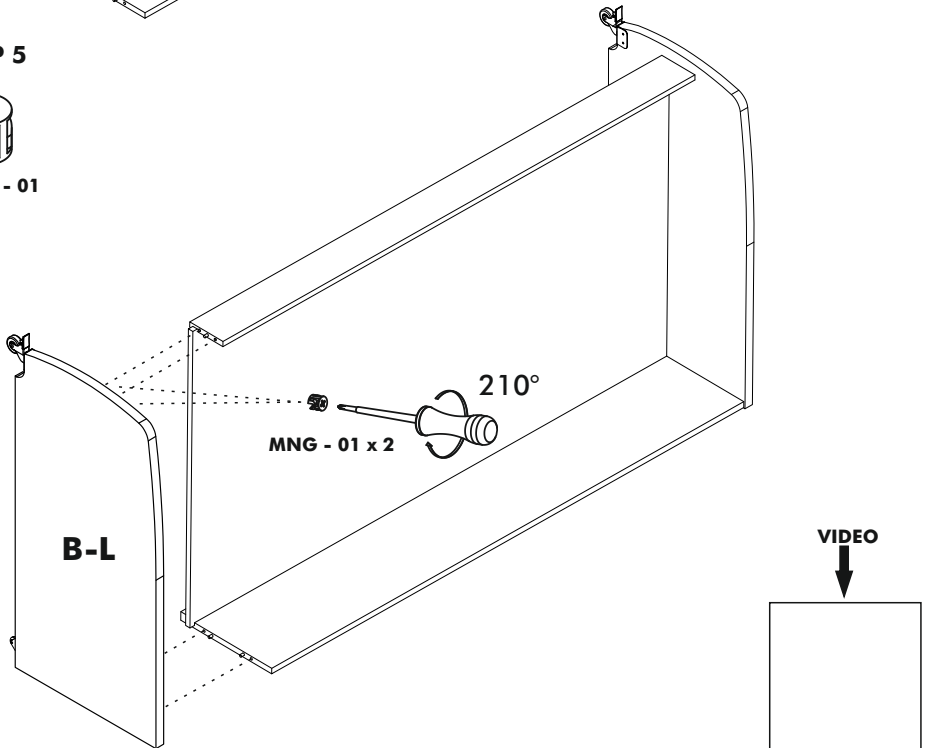

STEP 6






MNG - 01

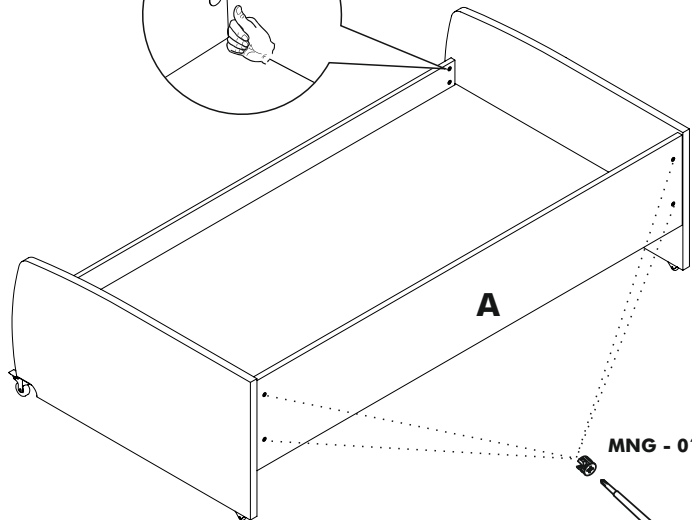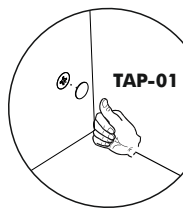


MNG - 01 x 4



STEP 7

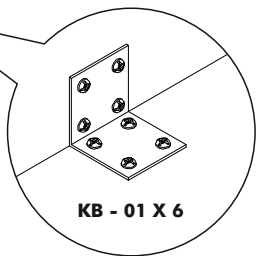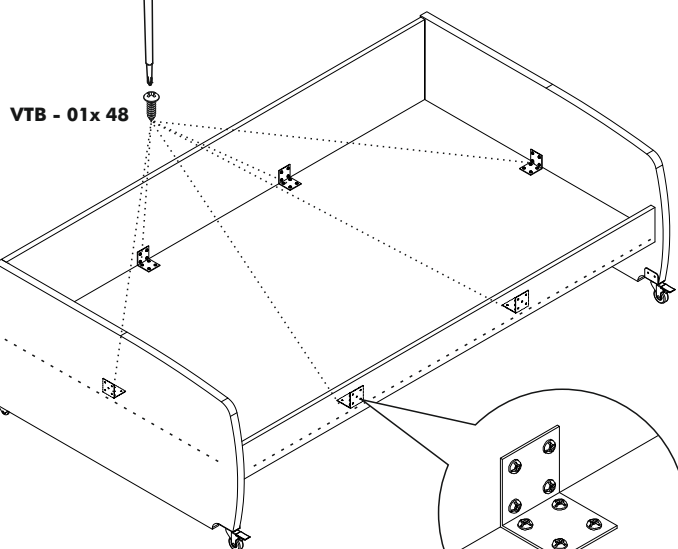

VIDEO

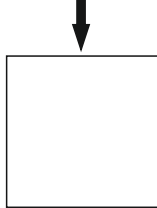

link



MULTiMO

www.multimo.com